


PIONEER THRU-AXLE BIKE MOUNT

43233

Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 30min

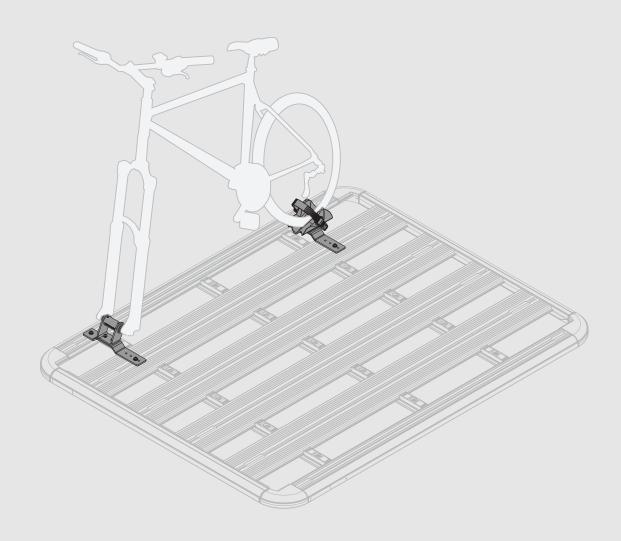

22A Hanson Pl, Eastern Creek, NSW, 2766 (02) 8846 1900 rhinorack.com.au Rhino-Rack USA

Unit D, 2450 Airport Blvd, Aurora, CO, 80011 877-744-6622 rhinorack.com

Document No: R1762

Issue No: 04

Issue Date: 17/04/2022

Thru-Axle Bike Mount Instructions

Carrying Capacity

Check your vehicle owners hand book for vehicle maximum carrying capacity. Please ensure you use the vehicle manufactures maximum roof allowance if it is lower than the figure listed in this instruction. Load must be evenly distributed over the system.

Off Road: Any driven path taken that does not contain a surface protection layer (tar/bitumen).

System Load Limit: Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is in motion.

System Load Limit	Off Road Cargo Allowance
17kg / 37lb	11kg / 24lbs

Warning

- Check part number or kit is correct for use with your vehicle.
- Do not attempt to fit the rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks were purchased.
- Off-road conditions can be much more rigorous. Extreme care must be taken on any driven path that does not contain a surface protection layer (tar/bitumen).
- Racks must be removed when vehicle is put through an automatic car wash.
- With utility/pick up vehicles, the cabin and the utility tray/truck bed move independently. Racks and vehicle can be damaged if the item transported is rigidly fixed at points on both the cabin and utility tray/truck bed. Instead, rigidly fix to either the utility tray/bed racks or the canopy roof racks.
- Always ensure you fasten your load securely.
- Use only non-stretch fastening ropes or straps to attach cargo to your load.

In service maintenance checks

- All bolt connections should be checked after driving a short distance when you first install your roof racks.
- All bolted connections should be checked again at regular intervals (weekly is recommended, depending on road conditions, usage, loads and distances travelled).
- All bolted connections should be checked each time they are re-fitted.
- Off-road conditions are more rigorous. Check all bolted connections and your load more regularly.
- Ensure that your vehicle manufacturer's GVM, and gross axle weights are not exceeded (refer to vehicle owner's manual).

Torque Settings:

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings:








Note for Dealers and Fitters

It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

Parts List

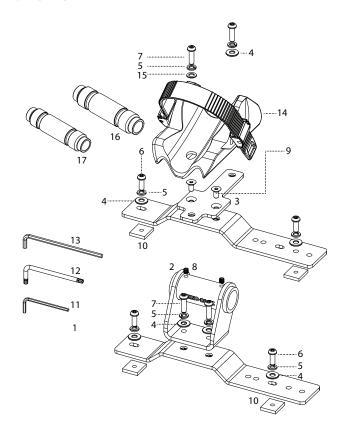

Item	Description	Qty
1	Multi Axle Mount Bracket	2
2	Multi Axle Fork Mount	1
3	Rear Wheel Adaptor Plate	1
4	M6 x 16mm Flat Washer	7
5	M6 Spring Washer	8
6	M6 x 16mm T27 Sec Screw	4
7	M6 x 20mm T27 Sec Screw	4
8	M6 x 6mm Grub Screw	2
9	M6 x 12mm CSK Set Screw	2
10	M6 x 24mm x 21mm Plate Nut	4
11	3mm Allen Key	1
12	T27 Torx Key	1
13	4mm Allen Key	1
14	Rear Wheel Mount	1
15	M6 x 12.5mm Flat Washer	1
16	15 x 100mm Multi Axle Adaptor	1
17	9 x 100mm Multi Axle Adaptor	1

Tools Required:

T1 - Measuring Tape

Installation Steps

