


2 / 4 Bike Hitch Mount Carrier RBC045 / RBC053

Important:

- 1. Check the Rhino-Rack website to ensure you have the latest issue of these instructions.
- 2. Please refer to your fitting instruction to ensure that the accessory is installed in the correctly.
- 3. Check the contents of kit before commencing fitment and report any discrepancies.
- 4. Place these instructions in the vehicle's glove box after installation is complete.
- 5. These instructions must be followed for warranty to be upheld.

Fit Time: 20 min

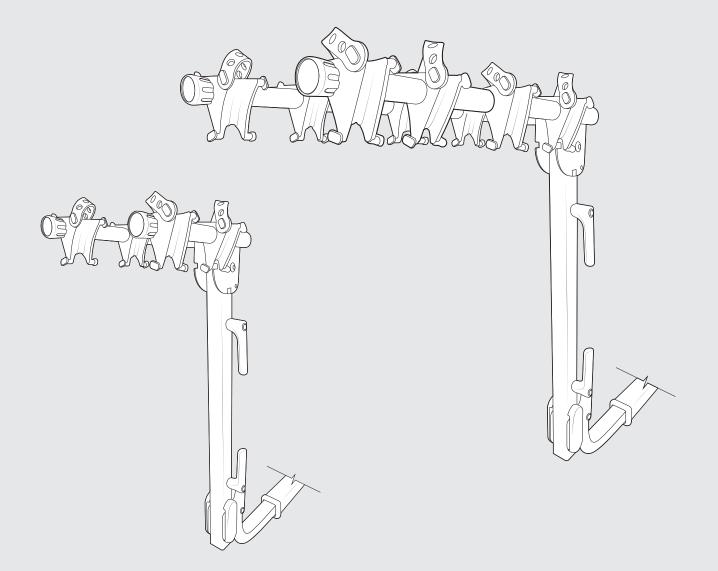

Rhino-Rack AUSTRALIA

22A Hanson Pl, Eastern Creek, NSW, 2766 (02) 8846 1900 rhinorack.com.au Rhino-Rack USA Unit D, 2450 Airport Blvd, Aurora, CO, 80011 877-744-6622 rhinorack.com

Rhino-Rack CANADA


19100 Airport Way Pitt Meadows, BC V3Y OE2 rhinorack.ca

Document No: R1181 Issue No: 04 Issue Date: 02/08/2021

Carrying Capacity

Maximum Carrying Capacity:

Ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible.

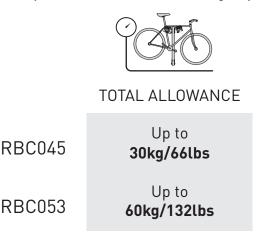

Warning

- Do not attempt to fit the accessory to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the product was purchased.
- Off-road conditions can be much more rigorous. Extreme care must be taken in off road conditions.
- Always ensure you fasten your load securely.
- Bike carrier must be removed when vehicle is put through an automatic car wash.
- The visibility of surroundings through reverse cameras may also be impacted.
- Be cautious when reversing.
- Bikes should be removed when raising and lowering carrier.

Use only non-stretch fastening ropes or straps. For use on vehicle hitch only - DO NOT INSTALL to rear of recreational vehicles.

In some states it may be against the law to obstruct clear view of lamps and registration plates. It is suggested that the Rhino-Rack Number Plate Holder (RBCA011) be purchased.

In service maintenance checks

- All bolted connections should be checked after driving a short distance when you first install your bike carrier.
- All bolted connections should be checked again at regular intervals (every 1000k/621mi) is recommended, depending on road conditions, usage, loads and distances travelled). All bolted connections should be checked each time they are re-fitted.

Torque Settings

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings: M6: 4-5Nm (3-4lbs/ft), M8: 8-10Nm (6-7.5lbs/ft) M10: 16-18Nm (12-13lbs/ft).


Sensitivity to Crosswinds, Behaviour in Curves and Braking.

Remember that the handling characteristics of your vehicle will change when transporting a load on the roof or at the rear. Exercise extreme care when transporting wind-resisting loads; special consideration must be taken into account when braking.


Note for Dealers and Fitters


It is your responsibility to ensure these fitting instructions are given to the end user or client. These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.


RBC045 Parts List

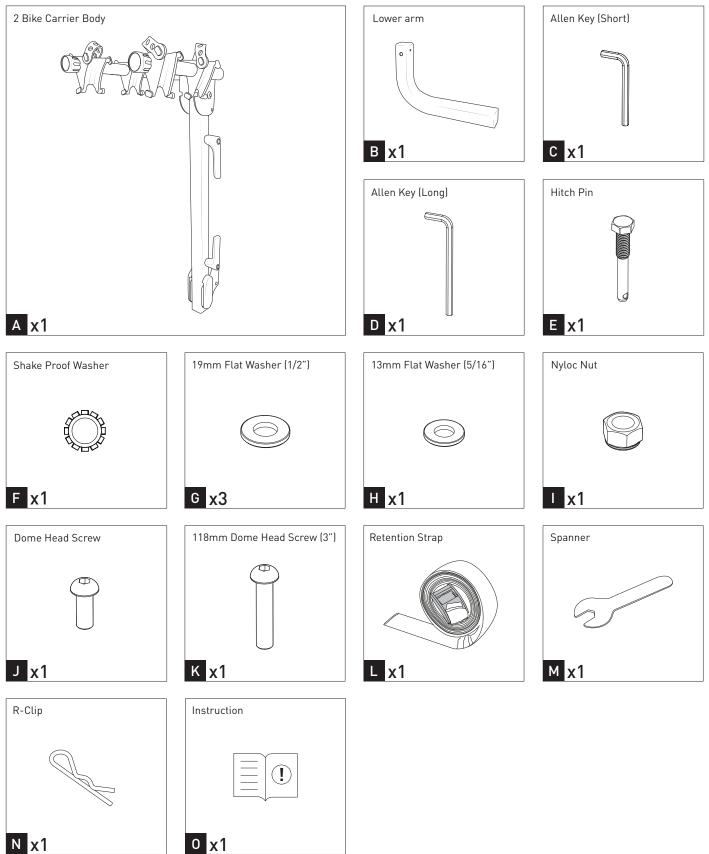


RBC053 Parts List

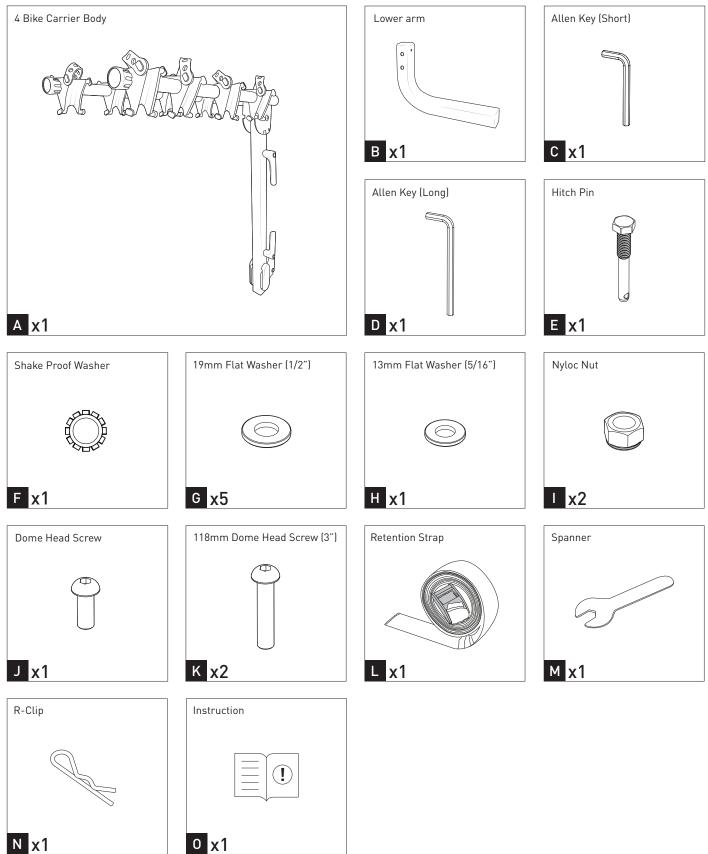


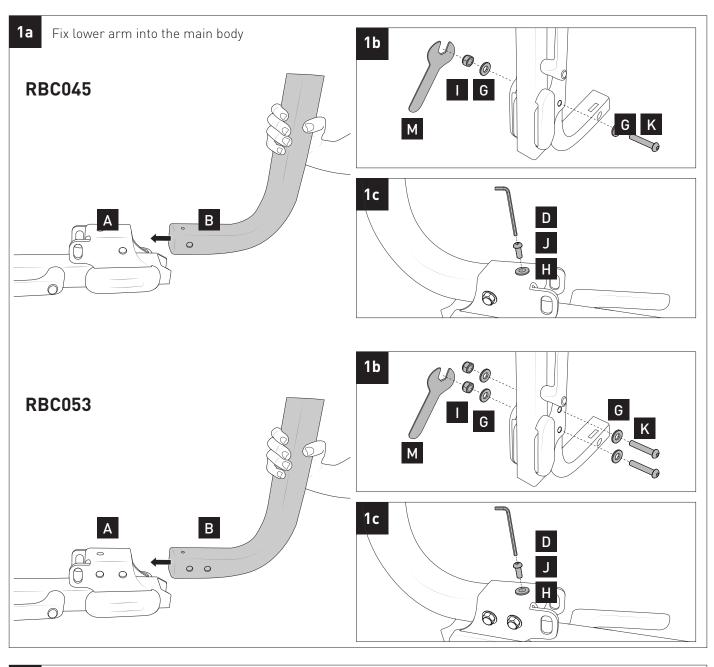

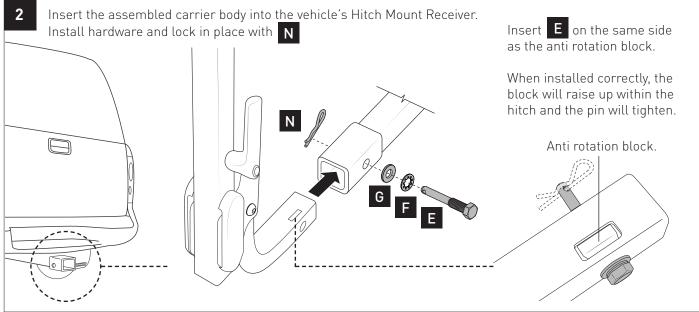

3 Pull the top lever to disengage the lock holding the bike cradles in place. Lift the cradles up to their correct position. Release the lever and cradles will fix in place.

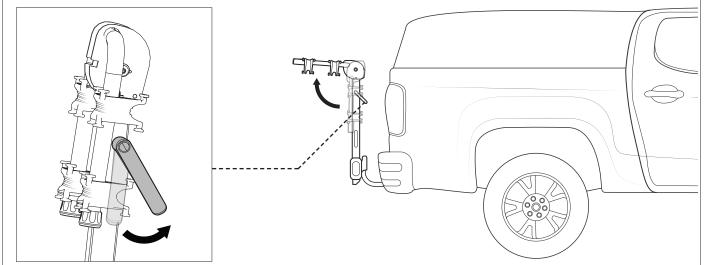


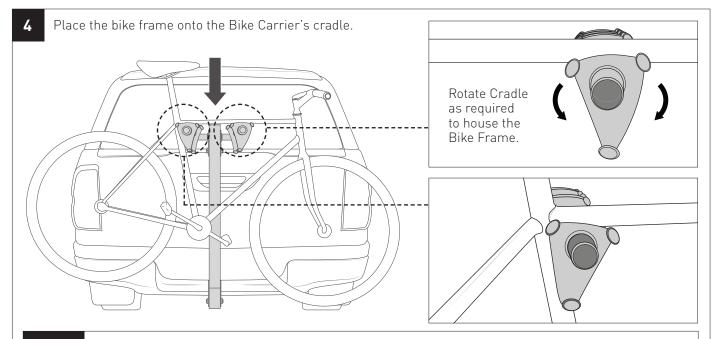






When fixing more than 1 bike, face bike in alternate directions as it will ensure the bikes will not clash together during travel. Adjust fork positions to ensure there is no obstruction of view to lamps and registration plates.




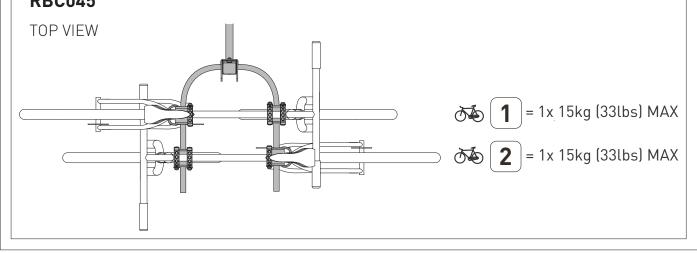

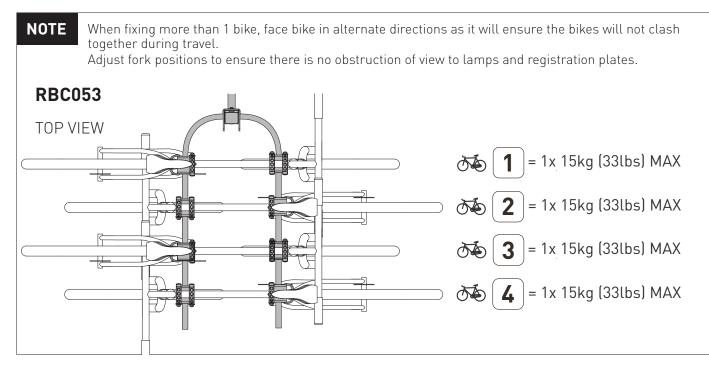


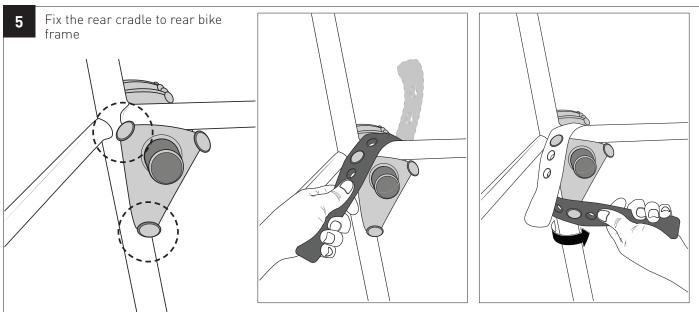

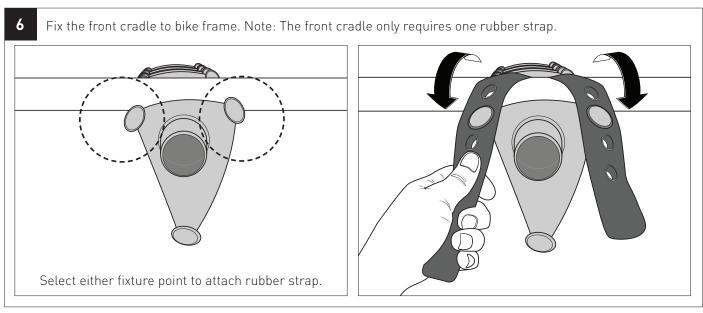

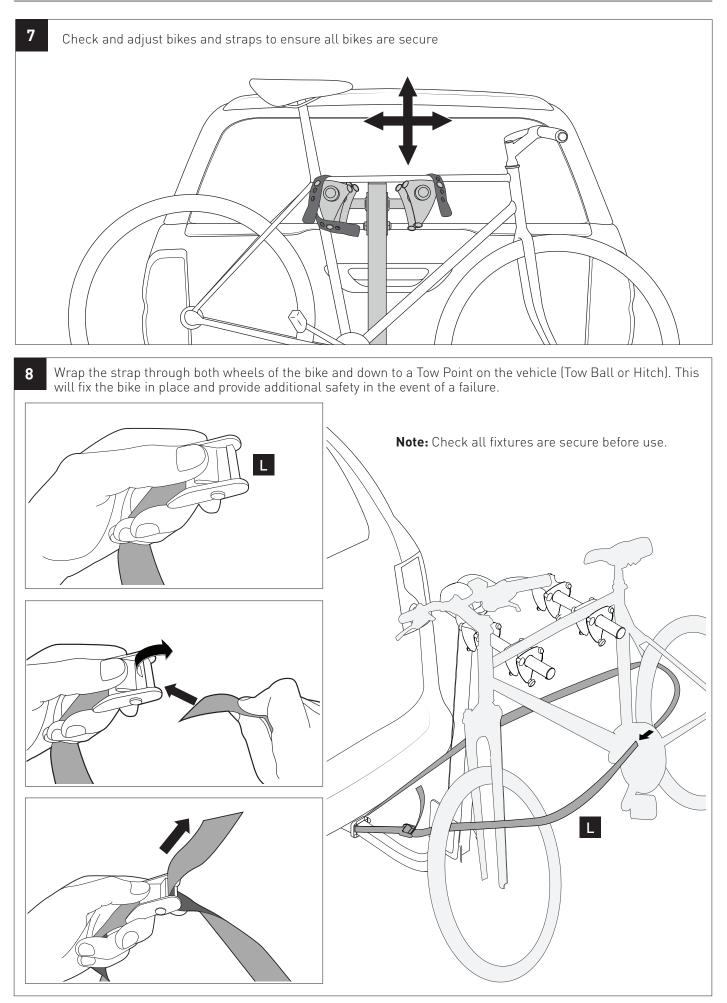


9 When the carrier is not in use, lift the locking cam on top of the bike carrier. This will unlock the carrier arms. Drop the arms, there will be an audible 'click' when the arms reach their intended position.

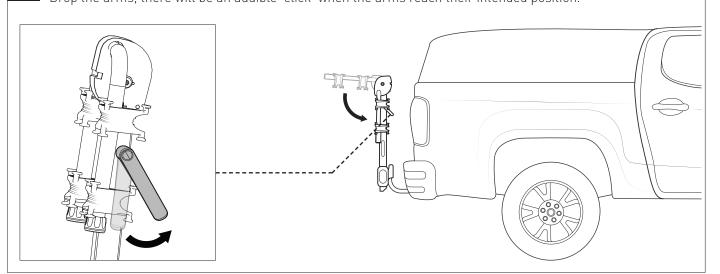

10 WHEN OPENING REAR DOOR/HATCH

- 1. Lift the locking cam at the bottom of the bike carrier.
- 2. The unit will drop 45 degrees allowing access to the vehicle.
- 3. Return to an upright position
- 4. Lock the locking cam

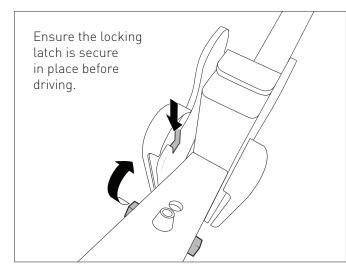

Note: Carrier may interfere with reverse sensors (dependent on their position), giving a false reading.

