
				CONTROLLE
		RHIN RCP48-	<b>IO-R</b> BK Base Kit	ACK
	Important:	Please read these instructions can Please refer to your fitting instruc- correct locations. Check the contents of kit before	ction to ensure that the ro	of racks are installed in the
Note: Crossbars and legs sold as separate. Suitable for both RVL, RVH, RCL and RCH legs and bars.				
Important Information				
	1. 🗌 Check Pa	art No./Kit is correct	3. Fit roof rack a	accessory
	2. 🗌 Read thro	ough instruction before installin	a 4.□ Check and re	echeck all fasteners are secure
Maximum carrying capacity: 75kg (165lbs) evenly distributed over crossbars when mounted on the strongest section of the roof. Please refer to your vehicle manufacturers handbook for maximum roof loading. Always use the lower of the two figures. Note: Be sure to check the Rhino-Rack website to see if you have the latest version of instructions before beginning.				
Advisory: It is essential that all bolt connections be checked after 48hrs from when you first install your crossbars. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the crossbars each time they are refitted. Make sure to fasten your load securely. Please ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible.				
Use only non-stretch fastening ropes or straps.				
Load Ratings When these roof racks are to be used on a vehicle that is driven off sealed roads, the manufacturer maximum roof load rating (to be found in the vehicle's User Manual) should be divided by a safety factor of <b>2</b> . For example, if the vehicle's maximum roof load rating is 75kgs\165lbs, these racks, when fitted to this vehicle should have no more than 37.5kgs/82lbs loaded on them.				
<b>Caution:</b> The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking. <b>Please remove crossbars when putting vehicle through an automatic car wash.</b>				
Note for Dealers and Fitters: It is your responsibility to ensure instructions are given to the end user or client.				
NSW 2116 (Ph) (02) 9 (Fax) (02) 9	eet, Rydalmere, , Australia. 638 4744 9638 4822	Prepared Authorised	No: R1326 By: Kayle Everett d By: Chris Murty /. Ltd. and may not be used c	Fit Time: 30min Issue No: 01 Issue Date: 10/04/2017 or changed for any other purpose than intended.

Page 1 of 3



## **RCP48-BK Base Kit**

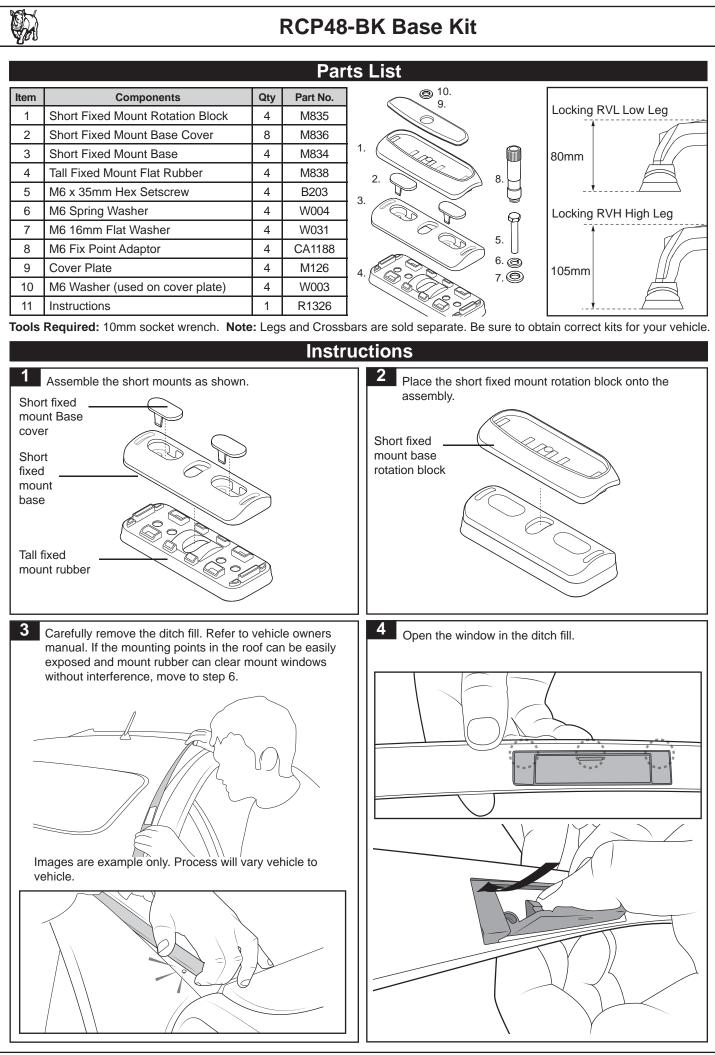