
CONTROLLED

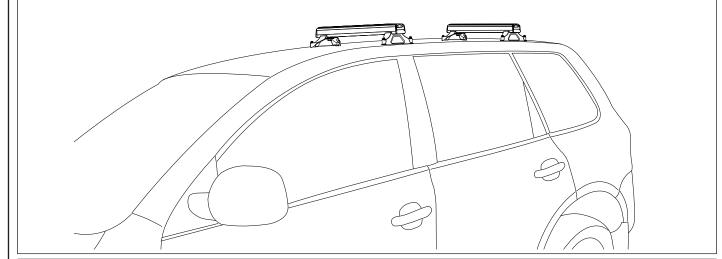

Rhino Heavy Duty Two Bar System - VW Touareg

Important: Please refer to your fitting instruction to ensure that the roof racks are installed in the correct locations. Check the contents of kit before commencing fitment and report any discrepancies. Place these instructions in the vehicle's glove box after installation is complete.



Maximum carrying capacity:

Sealed Road Cargo Allowance	Unsealed Road Cargo Allowance	Roof Allowance	Rack Weight
75kg / 165lb	53kg / 116lb	80kg / 176lb	5kg / 11lb

Roof Allowance: Unsealed Road: Total permissible weight attached to the roof of the car. This is inclusive of the weight of the roof rack system A road that does not have a hard, smooth surface of tarmac, concrete or asphalt.

Cargo Allowance: Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is in motion

Please refer to your vehicle manufacturers handbook for maximum carrying capacity. Always use the lower of the two figures. Load must be evenly distributed over the entire Pioneer. Weight of roof rack accessories is to be included in cargo allowance.

Torque settings

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings - M6: 4-5Nm (3-4lbs/ft), M8: 8-10Nm (6-7.5lbs/ft) and M10: 16-18Nm (12-13lbs/ft).

Warning:

- · Check Part No. and/ or Kit is correct for use with your vehicle
- Do not attempt to fit the rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks were purchased.

• Use only non-stretch fastening ropes or straps.

- The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.
- Although the system is tested and approved to AS1235-2000 / ISO 11154, off-road conditions can be much more rigorous. Extreme care
 must be taken in off road conditions

Recommendations:

It is essential that all bolt connections be checked after driving a short distance when you first install your roof racks. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the roof racks each time they are re-fitted. Always make sure to fasten your load securely. Please also ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible and must be entirely contained within the extents of the roof racks.

Note for Dealers and Fitters: It is your responsibility to ensure these fitting instructions are given to the end user or client Rhino-Rack, 22 Hanson St, Eastern Creek NSW 2766, Australia Document No: (02) 8846 1900 Prepared By: craig Jones rhinorack.com.au Authorised By: These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.

Issue No: 03 Issue Date: 12/02/2019

