

Important Information

Maximum carrying capacity:

	On Road Cargo Allowance	Off Road Cargo Allowance	Roof Allowance	Rack Weight
	75kg / 165lb	50kg / 110lbs	80kg / 176lbs	5kg / 11lb
Road:	Any driven path taken that is not on sealed (tarred / bitumen) and maintained			

Off Road:

Roof Allowance:

Total permissible weight attached to the roof of the car. This is inclusive of the weight of the roof rack system

Cargo Allowance: Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is in motion

Static Allowance: Total permissible weight allowed on top, and attached to roof racks whilst the vehicle is stationary Please refer to your vehicle manufacturers handbook for maximum carrying capacity. Always use the lower of the two figures. Load must be

evenly distributed over the two racks. Weight of roof rack accessories is to be included in cargo allowance.

Torque settings

Unless stated otherwise in these instructions, all fasteners should be set to the following torque settings - M6: 4-5Nm (3-4lbs/ft), M8: 8-10Nm (6-7.5lbs/ft) and M10: 16-18Nm (12-13lbs/ft).

Warning:

- Check Part No. and/ or Kit is correct for use with your vehicle
- Do not attempt to fit the rack system to your vehicle unless you fully understand these fitting instructions. Please direct any questions regarding fitting to the dealer from where the roof racks were purchased.

• Use only non-stretch fastening ropes or straps.

- The handling characteristics of the vehicle changes when you transport a load on the roof. For safety reasons we recommend you exercise extreme care when transporting wind-resistant loads. Special consideration must be taken into account when cornering and braking.
- Although the system is tested and approved to AS1235-2000 / ISO 11154, off-road conditions can be much more rigorous. Extreme care
 must be taken in off road conditions.
- Roof racks must be removed when vehicle is put through an automatic car wash.


Recommendations:


It is essential that all bolt connections be checked after driving a short distance when you first install your roof racks. Bolt connections should be checked again at regular intervals (once a week is enough, depending on road conditions, usage, loads and distances travelled). You should also check the roof racks each time they are re-fitted. Always make sure to fasten your load securely. Please also ensure that all loads are evenly distributed and that the centre of gravity is kept as low as possible and must be entirely contained within the extents of the roof racks.


Note for Dealers and Fitters:

It is your responsibility to ensure these fitting instructions are given to the end user or client

Rhino-Rack, 22 Hanson PI, Eastern Creek					
NSW 2766, Australia	Document No:	R1452			
(02) 8846 1900	Issue No:	03			
rhinorack.com.au	Issue Date:	02/04/2019			
	These instructions remain the property of Rhino-Rack Australia Pty. Ltd. and may not be used or changed for any other purpose than intended.				

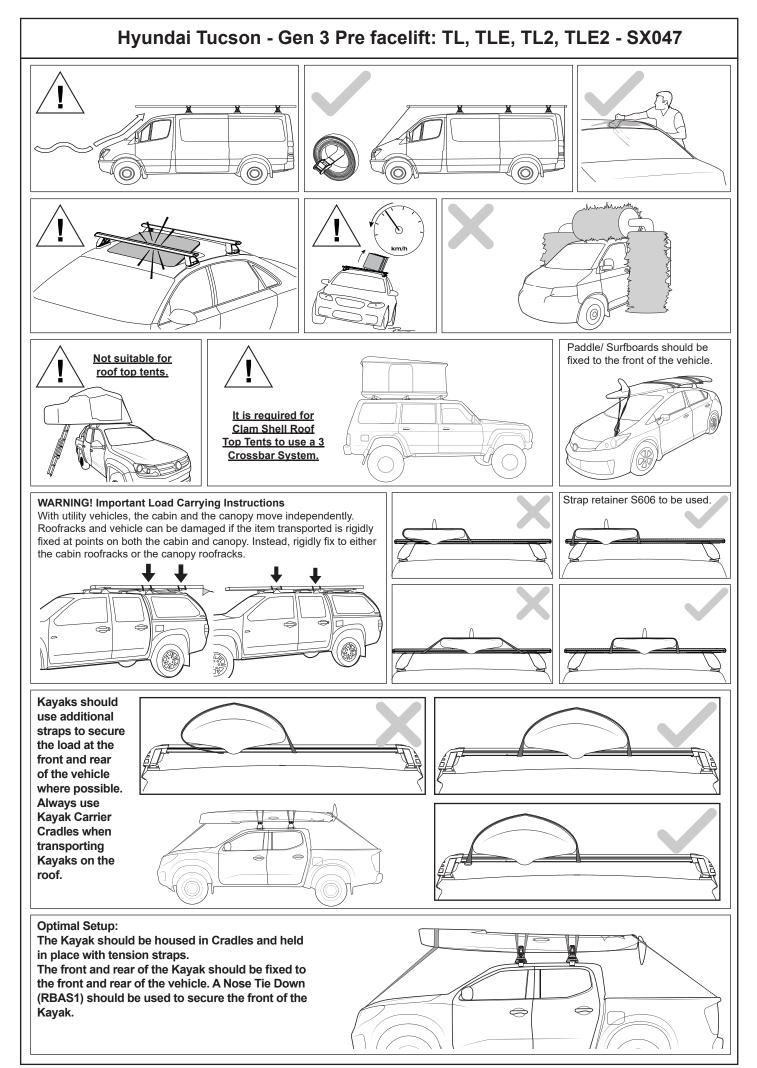

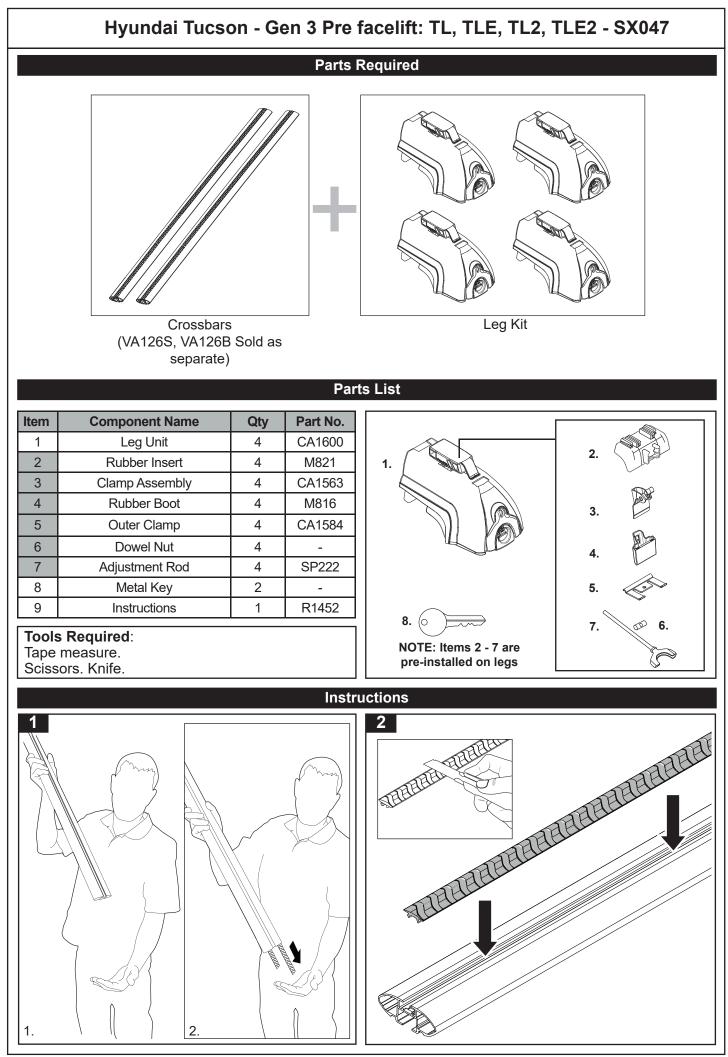

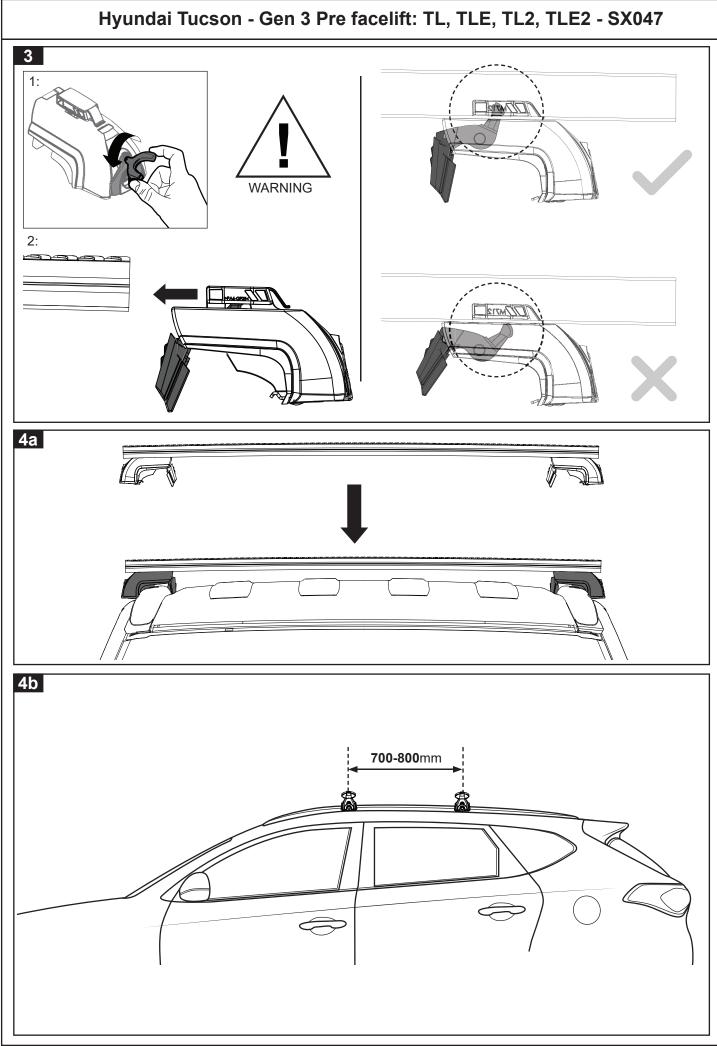

Hyundai Tucson - Gen 3 Pre facelift: TL, TLE, TL2, TLE2 - SX047

