

MAKE: LDV
MODEL: E DELIVER 7
TYPE: VAN
YEARS OF MANUFACTURE: 08/2023
PART NUMBER: CBLDVED7
POSITION: Behind 1ST Row



KIT:

- 2 X CBLDVED7-B-001
- 2 X CBLDVED7-B-002
- 2 X 175MM BRACKET
- 2 X M10X30 SET SCREW
- 4 X M10X20 SET SCREW
- 4 X M10 WASHER LARGE
- 4 X M10 WHIZ NUT
- 2 X M10 PLATE ON WIRE
- 4 X CABLE TIE 300MM



Your kit was packed by: _____

ALWAYS CHECK FOR FUEL LINES ETC BEFORE DRILLING AND ALWAYS USE A DRILL STOP.



VIC
25 Kalman Drive
Boronia VIC 3155 Australia

NSW
376 Hoxton Park Road
Prestons NSW 2170 Australia

Tel: 1800 FLEET FIT (353 383)
autosafe.com.au

1. Remove lower tie points from bottom of b pillar.



2. Place barrier into position and secure to front row head rest stalks using cable ties.
3. For low roof models, feed M10 plate on wire through roof bow, oval opening and align with third hole in from outside of vehicle.




VIC
25 Kalman Drive
Boronia VIC 3155 Australia

NSW
376 Hoxton Park Road
Prestons NSW 2170 Australia

Tel: 1800 FLEET FIT (353 383)
autosafe.com.au

- Secure CBLDVED7-B-001 to roof bow using M10x30 Set screw. Secure bracket to top lug of barrier using M10x20 Set screw and M10 whiz nut. Ensure brackets follow the contour of roof. Do not fully tighten.

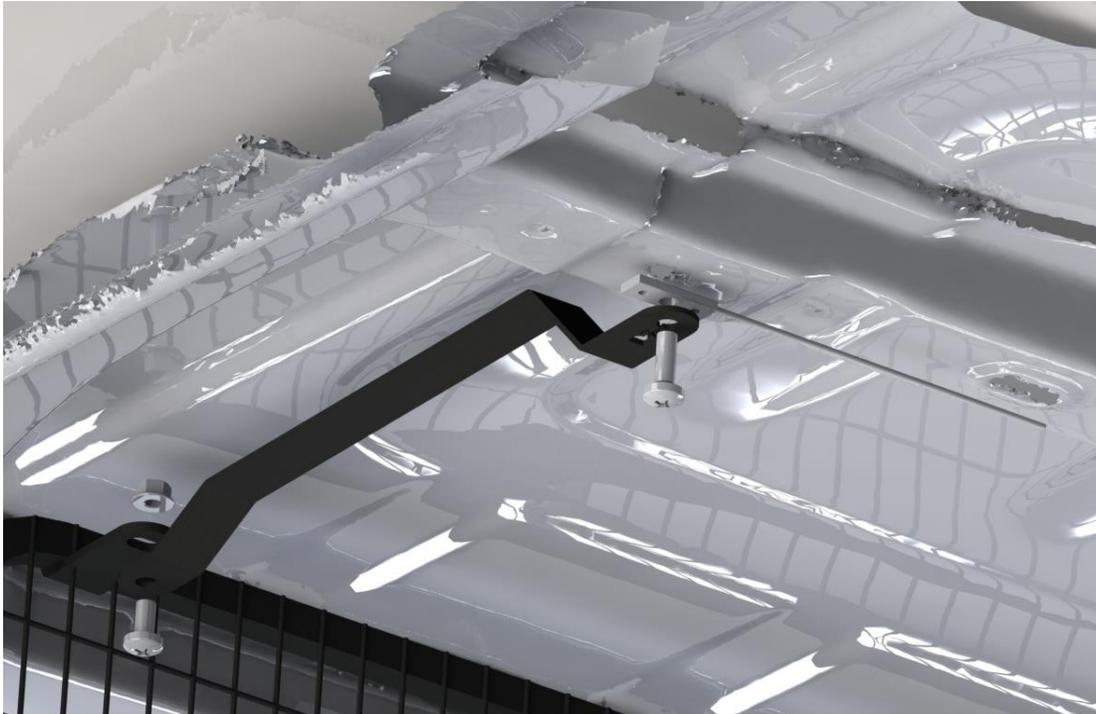

- For High roof models, attach CBLDVED7-B-002 to top lugs on barrier with M10x20 Set Screw and M10 Whiz nut. Swing bracket outwards and mark slot against panel directly above factory hole as shown in photo. Drill point using 10MM drill bit set at a depth of 10MM.



VIC
25 Kalman Drive
Boronia VIC 3155 Australia

NSW
376 Hoxton Park Road
Prestons NSW 2170 Australia

Tel: 1800 FLEET FIT (353 383)
autosafe.com.au


6. Secure bracket to body using a M10x30 Set Screw and M10 Plate on wire from inside cavity.



7. Separate spacer from tie point bracket assembly and insert spacer into original hole in b post rim panel.



8. Attach 175mm Bracket to barrier using M10x20 Set Screw and M10 Whiz nut. Do not fully tighten. Attach 175MM Bracket back to body using original tie point and bolt.

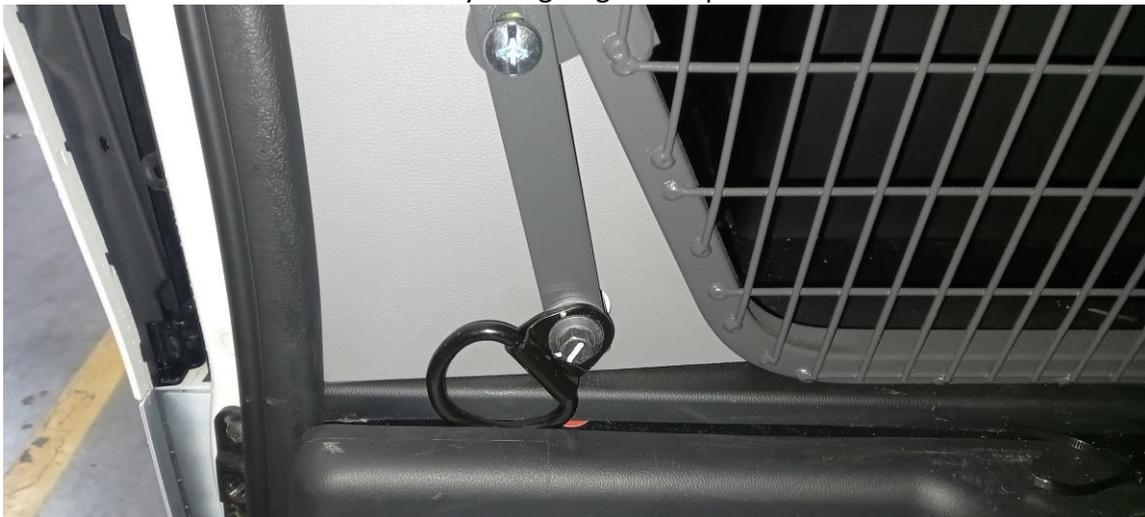

9. Centralize barrier and fully tighten all bolts.



VIC
25 Kalman Drive
Boronia VIC 3155 Australia

NSW
376 Hoxton Park Road
Prestons NSW 2170 Australia

Tel: 1800 FLEET FIT (353 383)
autosafe.com.au